

Instructions for EMP46 Speed Sensor



Caution:

Disconnect the negative battery cable prior to any installation

EMP46-0 is designed to locate and fix in place of the old mechanical speedo drive. The wiring connections are as follows:

- **Red** is the 5volt supply required by the sender. This should be connected to the PINK wire from the speedometer harness.
- **Black** should be connected to ground.
- **YELLOW** is the signal output and should be connected to the WHITE/BLACK from the speedometer harness

Caerbont Automotive Instruments Ltd
Abercrave, Swansea, SA9 1SH,
United Kingdom.

Tel: #44 1639 732200

Fax: #44 1639 732201

www.caigauge.com

Products designed and manufactured under ISO
9001:2008 quality standard.