

**CHECK FOR INNER FLEXIBLE SHAFT:** Lay out shaft straight on flat clean table and roll. Any 'Kinks' or obvious signs of damage will be seen. Then take an end in each hand allowing shaft to hang in a loop of approximately 9" (229 mm.) diameter. Rotate it slowly with the fingers. A satisfactory shaft will turn smoothly without 'snatch'.

