




Oil Line Kit p/n 230.012 & 230.013

Fitting Instructions

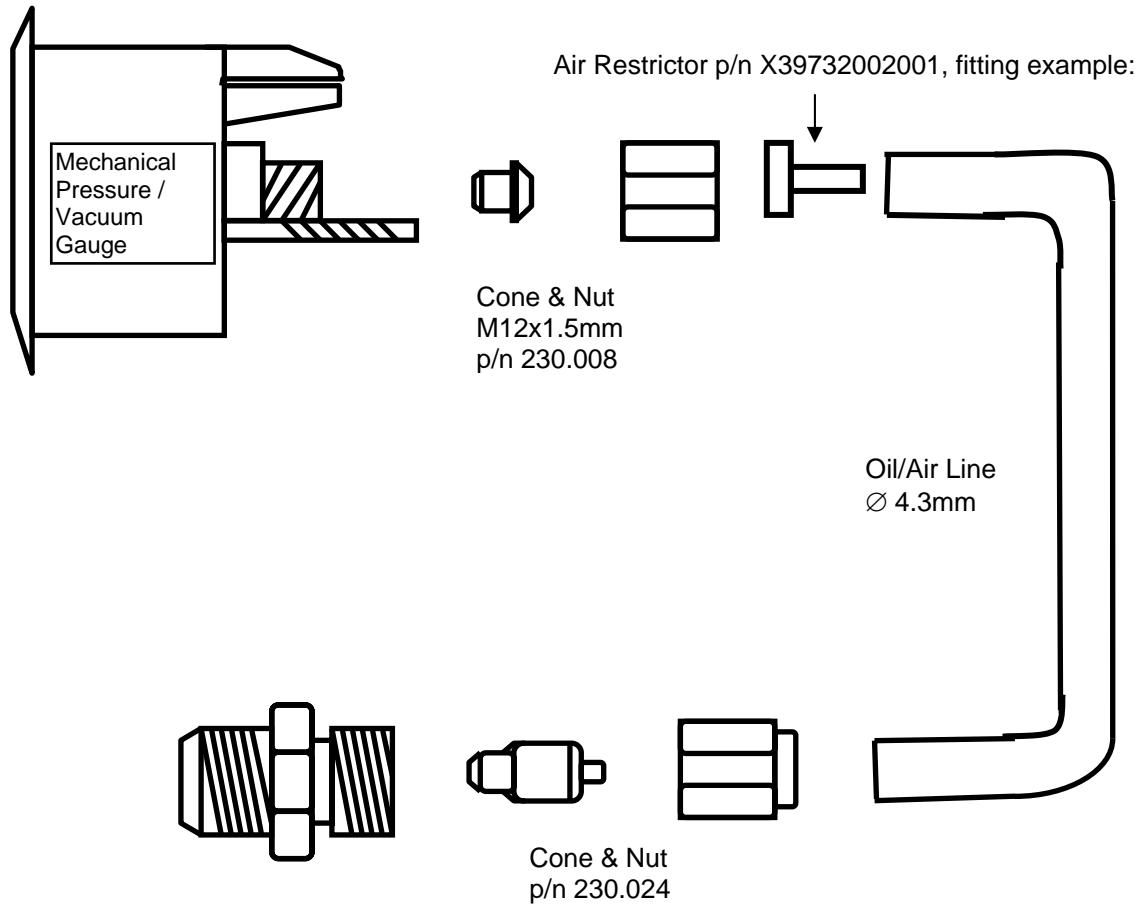

Note:

Insert the **air restrictor** p/n X39732002001 from gauge side **or** p/n 230.015 from the engine/air manifold side, when installing a Turbo Pressure/Vacuum gauge in the vehicle

Siemens VDO Automotive Pty Ltd (ACN004390587)
2 Scholar Drive Bundoora Victoria 3083
Customer Care Ph 1800 335 282 Fax (03) 94681502

Mechanical Pressure Gauges Air/Oil line Fitting Instructions



1. Gauge – Cone - Nut



2. Cone direction



3. Ready for insertion



4. Insert airline, cone and nut.



5. Tighten nut until firm



6. Tighten nut until airline hose is firm in place, using spanner/shifter as per picture above