


Auto-Start/Stop Controller — Cascade



Features

- Durable encapsulated protection against dirt, water, and dust – rated NEMA4 and IP65
- Operates during low battery blackouts
- Compatible with Electronic and Mechanical engines – ECU, MPU, AC Frequency
- J1939 Ready Works directly with our MurphyLink J1939 PowerView gages

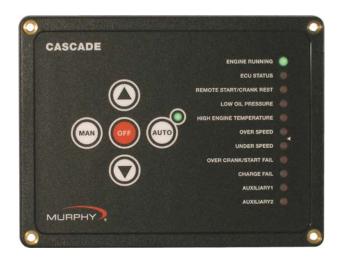

Description

The Cascade controller offers automatic start and stop control with easy configuration for a broad number of applications.

This auto-start controller is designed to fit any engine-driven application requiring a simple and robust automatic start and stop sequence. Pumps, Compressors, Grinders, Power Units and Generators are just few of the industrial applications for the controller.

The Cascade controller is fully compatible with all major engine types. Whether you are running mechanical or J1939 engines, the controller will work with your application.

Here are some of the unique features of the Cascade that only Murphy can offer at our competitive price.

- **Durability:** Encapsulated to protect it against dirt, water and dust, along with a compression gasket to fully seal it to the panel. Cascade is rated NEMA4 and IP65.
- Low Battery Blackouts: Operates in total blackout for a minimum of two seconds.
- Compatibility: Accept MPU, AC Frequency and ECU speed signals and can operate with standard and J1939 engines.
- Inputs and Outputs: The Cascade Inputs and Outputs are ruggedly protected and fault tolerant.
- J1939 Ready: Works directly with Murphy's J1939-ready PowerView gages, just plug and go, no sender is required.

Specifications

Power input: 9-35VDC continuous - operates during total blackout for 2 seconds minimum.

Power consumption: Sleep Mode (Manual): 1mA typical; Sleep Mode (Automatic): 4mA typical. Running Mode (Manual): 20mA typical; Running Mode (Automatic): 24mA typical.

Operating/Storage temperature: -40 to 85°C; (-40 to 185°F).

Humidity: 0-100%, non-condensing.

Housing: UV stabilized black polycarbonate and epoxy encapsulation. Weather tight and includes sealing gasket to keep moisture and debris out of enclosure. Properly mounted controller will maintain NEMA4 / IP65 rating of enclosure.

Vibration: Rated to 6G. **Impact:** Rated to 10G.

Inputs: Dedicated digital inputs for low oil pressure, high engine temperature, remote start, DC charge fail/Alternator fail. Two aux inputs are configurable for multiple functions.

Outputs: 7 – 4 auxiliary, configurable (1A DC protected). 3 dedicated outputs for Crank, Fuel/ECU, Alternator excitation.

Crank attempts: 3, 5, 10, Continuous. Crank Rest: 5-60 seconds, adjustable.

Shutdown lockout time delay: 5, 10, 15, 20, 25, 30 seconds.

Crank disconnect speed setting: Field settable 0-9999 RPM (16-60Hz AC freq input). Overspeed/underspeed trip point setting: ± 5 to 50% of nominal.

Speed sensing inputs: Magnetic pickup (5-120VAC RMS / 0-10 kHz) & AC frequency (30-600VAC RMS / 16-80 Hz).

CANbus interface: Directly reads engine speed, & engine status data from SAE-J1939 enabled engines.

MODbus interface: In J1939 applications drives PVA series analog gages.


^{*} Engine status data limited to low oil pressure, high engine temperature, "Wait to start" status, Warning & Fault lamp information, and communication error.

Front View

Back View

Back View

Front View

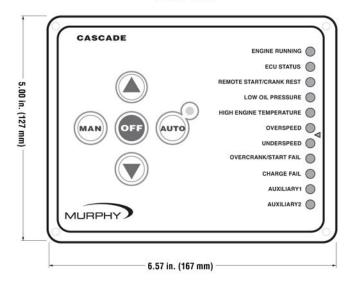

Cut Out Dimensions 5.63 x 4.06 in. (143 x 103 mm). Gasket 0.169 in. (4.3 mm) diameter 4 places 5.63 in. (143 mm)

6.06 in. (154 mm)

How to Order the Cascade Controller

To Order specify: CD101

Shipping Weight: 1 lb. (453 g) approximately.

Shipping Dimensions: 5.1 x 6.7 x 1.6 inch (130 x 170 x 41 mm) approx.

FW MURPHY

P.O. Box 470248 Tulsa, Oklahoma 74147 USA Phone: +1 918 317 4100 Fax: +1 918 317 4266 E-mail: sales@fwmurphy.com

INDUSTRIAL PANEL DIVISION

Fax: +1 918 317 4124 E-mail: ipdsales@fwmurphy.com

MURPHY POWER IGNITION

Web site: www.murphy-pi.com

CONTROL SYSTEMS & SERVICES DIVISION

P.O. Box 1819 Rosenberg, Texas 77471 USA

Phone: +1 281 633 4500 Fax: +1 281 633 4588 E-mail: css-solutions@fwmurphy.com

FRANK W. MURPHY LTD.

Church Road, Laverstock Salisbury, SP1 1QZ, UK Phone: +44 1722 410055 Fax: +44 1722 410088

E-mail: sales@fwmurphy.co.uk Web site: www.fwmurphy.co.uk

COMPUTRONIC CONTROLS

41 - 43 Railway Terrace Nechells, Birmingham, B7 5NG, UK Phone: +44 121 327 8500 Fax: +44 121 327 8501

E-mail: sales@computroniccontrols.com Web site: www.computroniccontrols.com

www.fwmurphy.com

FW MURPHY INSTRUMENTS (HANGZHOU) CO., LTD.

77 23rd Street Hangzhou Economic & Technological Development Area Hangzhou, Zhejiang, 310018, China

Phone: +86 571 8788 6060 Fax: +86 571 8684 8878 E-mail: apsales@fwmurphy.com





08/20/09

Warranty - A limited warranty on materials and workmanship is given with this FW Murphy product. A copy of the warranty may be viewed or printed by going to www.fwmurphy.com/support/warranty.htm